CONNECTION EC-SENSOR EC5105 ON CONTROLLER EC3040

CABLE CONNECTION

Brown/Red	23
Black Transparent	25
Orange	27
Yellow	28
Green	29
Black Shield	29

POWER SUPPLY

86 / 220 Vac	:	1 and 2
Ground	:	3

SET-UP REFERENCE TEMPERATURE

The reference temperature has a factory value of 20°C. If you use the calibration liquid of, for
example, Nieuwkoop BV (with reference temperature 25°C), please set the reference
temperature to 25°C as follows:

MODE
ESC

Press this key 2 times, display will show SEL-UP PrESS Ent

ENT Press this key once,

display will show PRS	5 (if the password is not used, please press	ENT	again)
			•

₽ress this key 3 times to go to option 2.3,

display will show 2.3 rEF. LENP., followed by PC 20.0

	4	
L		

or Press to select the value (25.D)

ENT	
-----	--

Press to confirm (UPdRLE will appear)

MODE

Press 4 times to go back to the main menu

CONDUCTIVITY CALIBRATION

By keeping the clean and dry sensor in air, the display will show \square .

If the readout is different than zero, it is possible to perform the following zero calibration:

ZERO By pressing this key, the unit will show the following message:

2Ero	ERL.,	followed by t	he actual c	conductivity	value or	ERL.	OFF	if the	calibratio	on funct	ion has
been	disa	bled in the set	t up menu	(display S1.1	1)						

ENT	Press to	o confirm	as soon a	s the valu	e is stable	(please r	note that it	takes ab	out 20 se	econds
and	is ready	/ as soon	as UPdALE	appears)	and to end	d the cali	bration			

By pressing this key, the unit will show the following message:
5En5. [AL., followed by the actual conductivity value, or [AL. DFF if the calibration function has
been disabled in the set up menu (display S1.1)
or Press to change the value according to the standard solution value

Press to confirm (UPdALE appears) and to end the calibration



NIEUWKOOP

ADJUSTING RANGE

Press this key 3 times,

display will show [OnFI & PrESS Ent

Press this key once,

display will show PR55 (if the password is not used, please press 🛤 again)

Press this key once,

Display will show 1.2 SEALE followed by the actual setting

or **Press** to change the range

Press to confirm (UPdRLE appears)

Press to 3 times to return to the main menu

SET POINT CALIBRATION

SETT

or By pressing this key, the unit will show the following message:

5EE I (5EE2) Lo or H, (depending on the configuration done in display C3.1 of C3.2), followed by the actual value

or Press to change the value

[RL. OFF will appear if the calibration has been disabled in the set up menu (display S1.1)

Press to confirm (UPdALE appears) and to end the calibration

COMPLETE USER MANUAL

Scan the QR code for the complete user manual.



