



NIEUWKOOP

USER MANUAL



GT3000

CO₂ TRANSMITTER, 0-2000 PPM



TO MEASURE  TO KNOW




General

The IAQ-sensor product (sensor for wall mounting) is designed to measure carbon dioxide (CO₂) in rooms. Option TR is prepared for temperature measurements by the resistive temperature probe mounted by the user. The temperature probe is potential free (floating). Option Disp, displays the measured CO₂ value in ppm (parts-per-million) on the LCD.

The units are designed for connecting to Direct Digital Control (DDC) with 0–10V or 2–10V signal inputs. The two parallel signal outputs OUT1 (0–10V) and OUT2 (2–10V or 4–20mA) give linear signal voltages or currents corresponding to the measuring range. The output OUT2 also indicates the status by setting the output voltage to 1V or the output current to 2mA when the sensor self-diagnostics detects any error.



To open the wall mounted housing

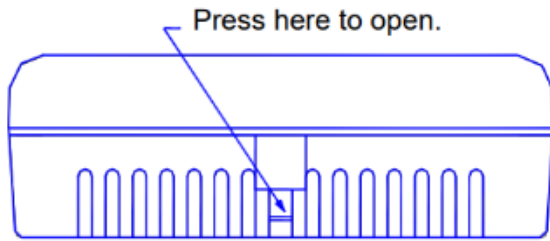

NOTE:
ESD sensitive product.
Use ESD protection equipment.

Figure 1. Closed housing seen from above. The housing is opened by pressing a screw driver on the locking hook. The locking hook is then released.

Electrical connections

The power supply has to be connected to \sim \oplus and \perp . \perp is considered as system ground.

NOTE:

The same ground reference has to be used for the unit and for the control system!

Terminal	Function	Electrical data	Remarks Standard settings	Remarks Settings of ext range 10000ppm
\sim \oplus	Power (+)	24VAC/DC+ ($\pm 20\%$), 2W		
\perp	Power ground (-)	24VAC/DC-	System voltage reference	
Out (1)	Analogue output 1 (+)	0-10VDC	0-2000 ppm CO ₂	0-10000 ppm CO ₂
Out (2)	Analogue output 2 (+)	2.0-10.0VDC or 4.0-20.0mA	0-2000 ppm CO ₂ Status = ERROR	0-10000 ppm CO ₂
		0.9-1.6VDC or 1.5-2.5mA	Status = NOT READY	
		0VDC or 0mA		

Table I. Connections of the main terminal

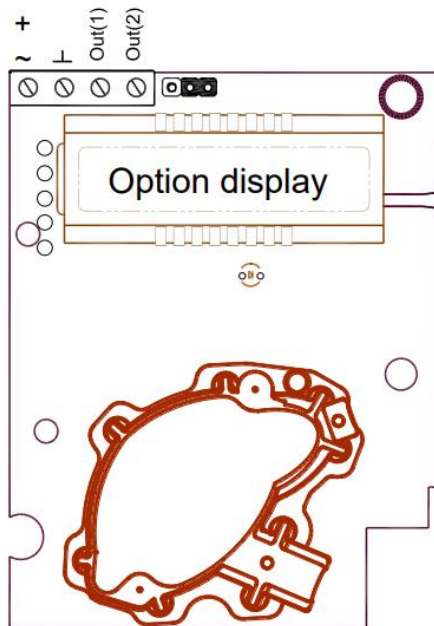


Figure 2. PCB with jumper to configure OUT2 for current output 4–20mA or voltage output 2–10VDC



Figure 3. Enlarged picture of the PCB with the jumper set to current output (left position)

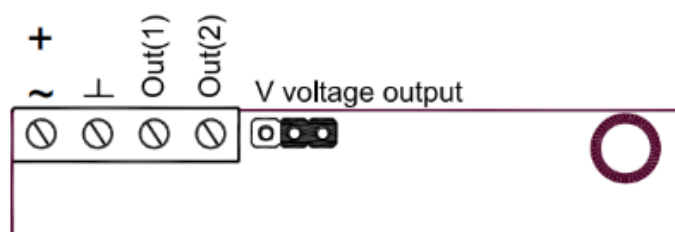


Figure 4. Enlarged picture of the PCB with the jumper set to voltage output (right position)

Self-diagnostics

The system contains a complete self-diagnostic procedure that is executed automatically when the sensor is in operation. The yellow LED is lit if an error is found. Sensors with display show a wrench if an error is found. The wrench is shown and the yellow LED is lit during the first seconds after power up and if the measuring range exceeded. They are automatically turned off when the sensor returns to normal operation. The output OUT2 indicates the same information by setting the output voltage to 1V or 2 mA.

Maintenance

The unit is basically maintenance free in normal environments thanks to the built-in selfcorrecting ABC algorithm. Discuss your application with Nieuwkoop B.V. in order to get advice for a proper calibration strategy.

**NOTE:**

The sensor accuracy is defined at continuous operation (at least three (3) ABC periods after installation)

Electronic products should be disposed of via a recycling centre.


Dimensions

Figure 5. Sensor dimensions in mm and (inches)

Wall mounting

screw head diameter <7.5 mm (0.295 inches)

screw head height <2.4 mm (0.094 inches).

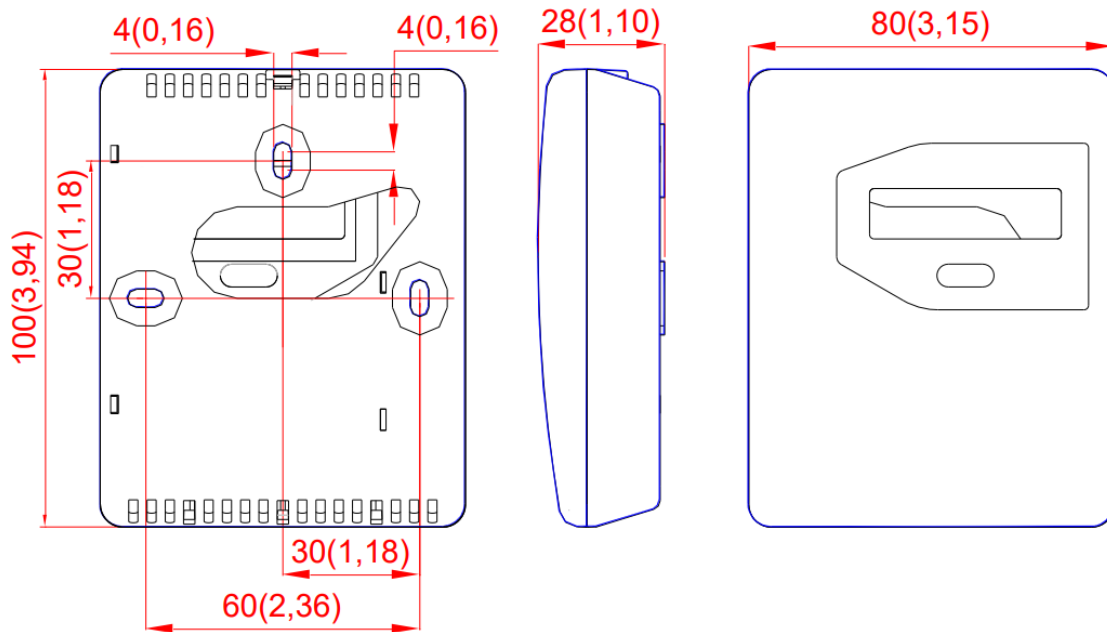

TO MEASURE  TO KNOW

Nieuwkoop BV

Aalsmeerderweg 249-S
1432 CM AALSMEER

0297 325836

info@nieuwkoopbv.nl
www.meten.nl



NIEUWKOOP